



# TECHNICAL BULLETIN

## INTERNAL RESET OF MDP500

Internal reset is very useful if the machine crash and cannot power up (blank display). This happens if the batteries are accidentally removed or the external power supply is disconnected during operation mode. This reset is a factory default. Any set ups stored will be erased.

Some machines have a hole on the bottom panel to access the internal reset switch. Machines, which do not have a hole, follow the step-by-step procedures below.

1. Remove the bottom cover by undoing the 4 screws as shown in the diagram.
2. Place the batteries in the machine.
3. Taking care, press the reset button as shown in the diagram.
4. Check that the machine starts up correctly.
5. Replace bottom panel.

