

Setting up your Monitor Operating Module

Please read this before using your MOM unit

Below is a short description on setting up the MOM. Please also refer to our Getting Started Guide on our website: www.digitalaudio.dk/support, Guides and documentation.

Included in the box:

1. Pc. MOM-BASE
1. Pc. DC power supply
1. Set-up instruction



Note. The MOM can be powered by PoE via the Ethernet Cable. This requires that you connect to a PoE enabled Ethernet switch. The unit can also be powered by the enclosed DC power supply. Both supplies can be connected at the same time.

Place the MOM on a hard and dry surface.

1. Connect the Ethernet cable
2. Connect the DC power if the network is not PoE enabled
3. Make sure the DADman software is loaded and connected to the network
4. Select the MOM in the DADman list, where the MOM unit should be listed when discovered
5. Attach the MOM in the DADman Monitor Profile and set up the configuration for the unit



NTP Technology

NTP Technology



Note. When power is connected, the MOM will boot up and after approx. 2 sec. the stat led will blink red. When the MOM is attached to the monitor profile the led will change to green.

Rear panel of MOM



Foot switch

5V /1A DC Ethernet/PoE

© 2018 All rights reserved. DAD - Digital Audio Denmark is a registered Trademark of NTP Technology A/S, who is the legal owner of the brand.

Product features and specifications are subject to change without notice.

NTP Technology A/S shall not be liable for technical or editorial errors contained herein, nor for incidental or consequential damages resulting from the furnishing, performance or use of this manual.

Company Address: NTP Technology A/S, Nybrovej 99, DK-2820 Gentofte, Denmark
E-mail: info@digitalaudio.dk, Web: digitalaudio.dk

All trademarks are recognized as the property of their respective owners.

Doc No. MOM-8001-A-4 rev.1