


aNorm for DB6

QUICK START GUIDE

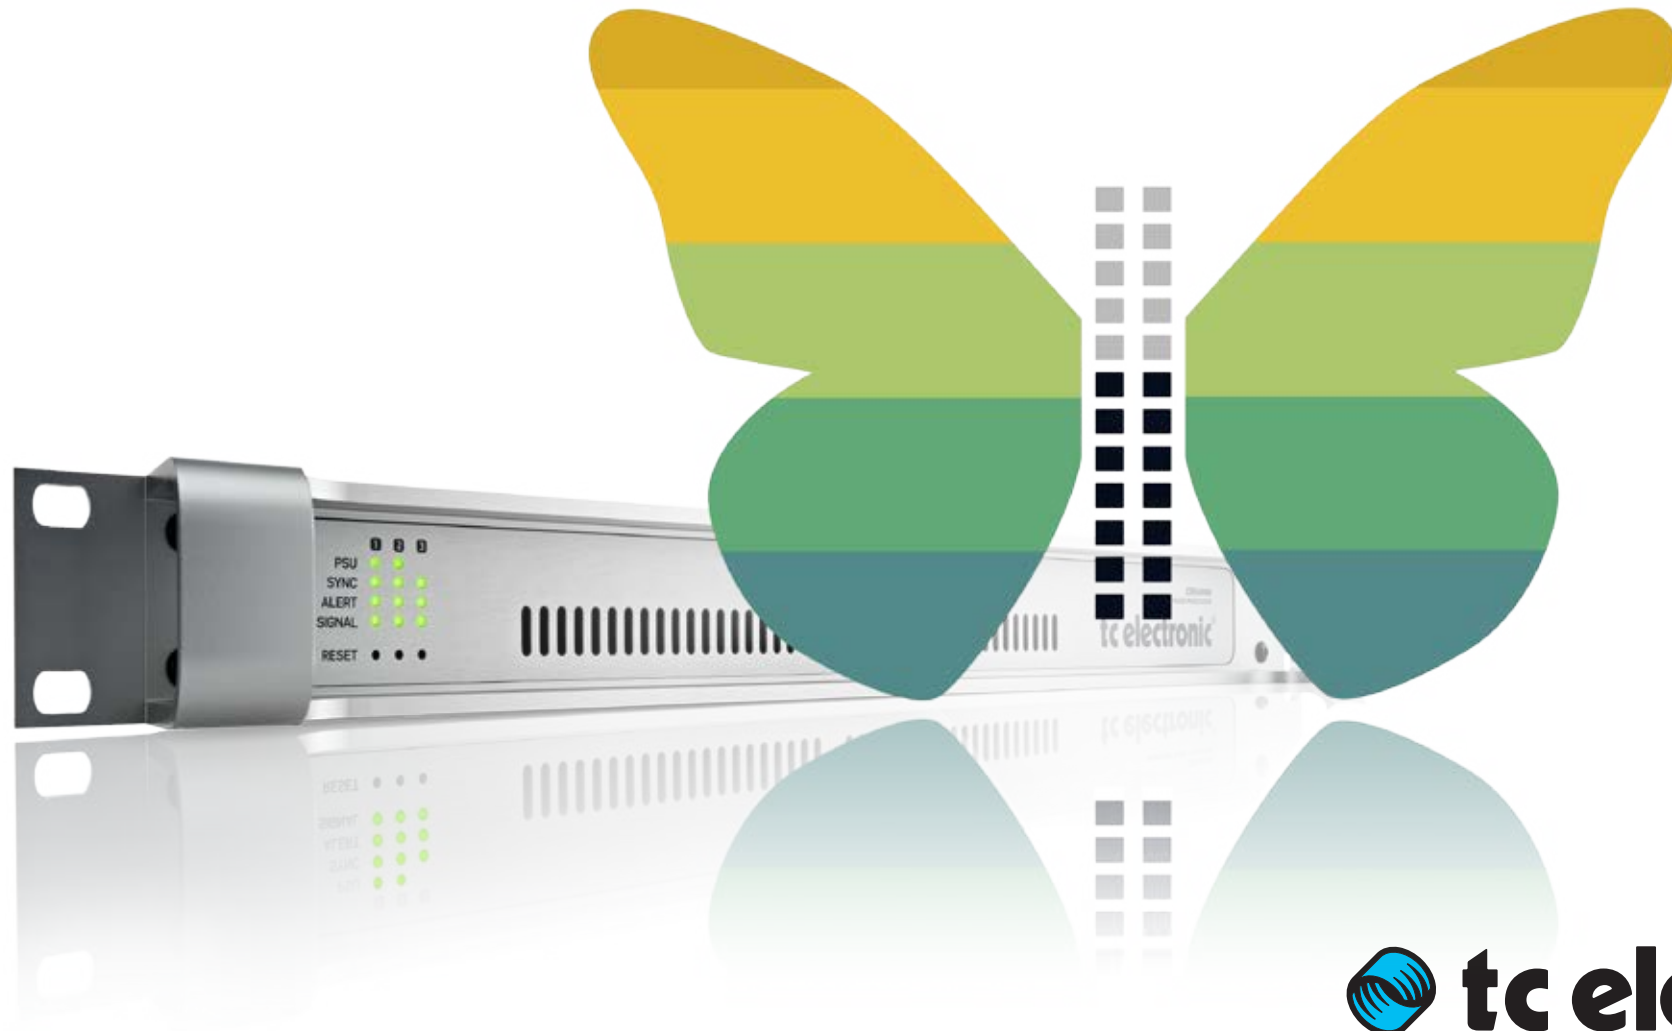


Radio levelling




Preset to Recall	"Not Norm Basic"
GPI Control	(none)
Parameters to Tune	<ul style="list-style-type: none">History Length – <i>set to 1-4 minutes</i>LRA Target – <i>for more/less LRA restriction</i>

Before aNorm Processing

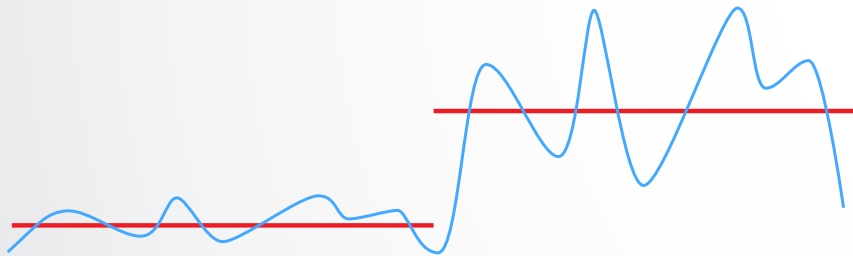

After aNorm Processing

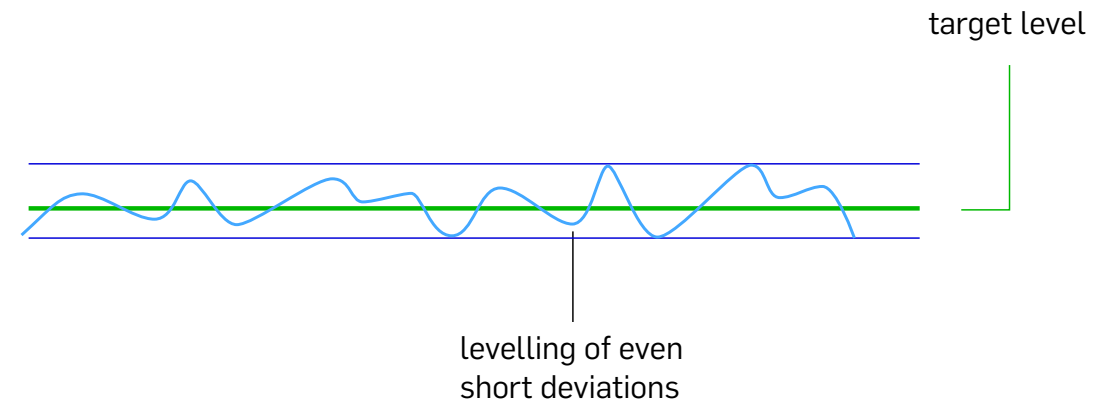


“Sausage” Processing




Preset to Recall	“Not Norm Basic”
GPI Control	(none)
Parameters to Tune	<ul style="list-style-type: none">☐ LRA Target – <i>set to 8 LU or less</i>☐ Processing Rate – <i>set to Fast</i>

Before aNorm Processing

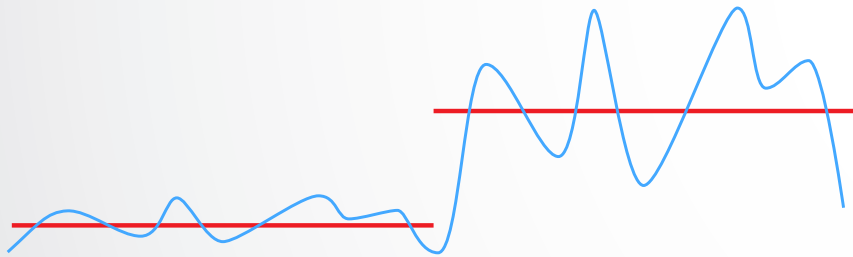

After aNorm Processing

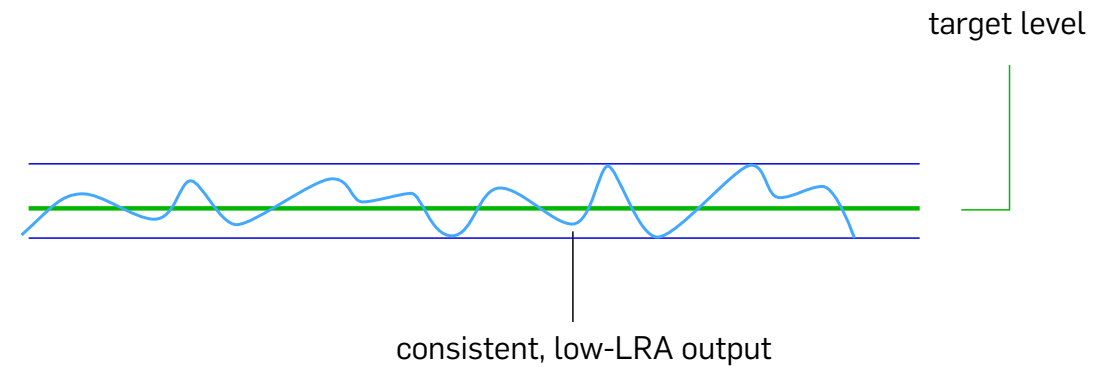


Gentle processing of classical etc.




Preset to Recall	"Not Norm Basic"
GPI Control	(none)
Parameters to Tune	<ul style="list-style-type: none">Processing Rate – <i>set to Slow</i>LRA Target – <i>set to 10 LU or more</i>

Before aNorm Processing

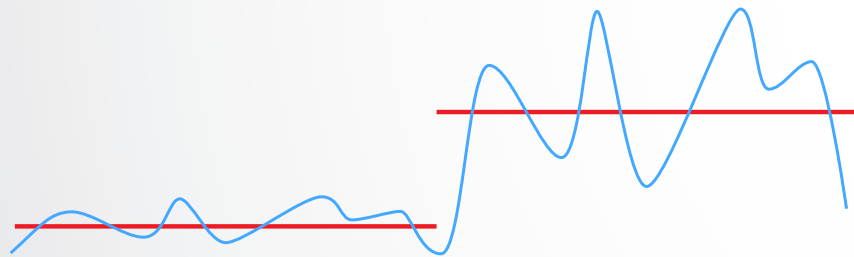

After aNorm Processing

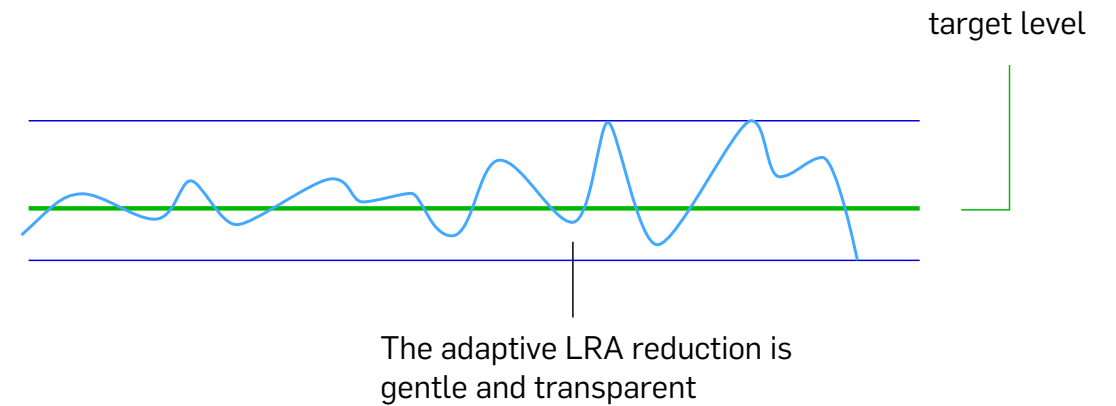


Normalized input




Preset to Recall	"Not Norm Basic"
GPI Control	(none)
Parameters to Tune	<ul style="list-style-type: none">Norm. level – <i>set to normalization level of the input</i>LRA Target – <i>for more/less LRA restriction</i>

Before aNorm Processing

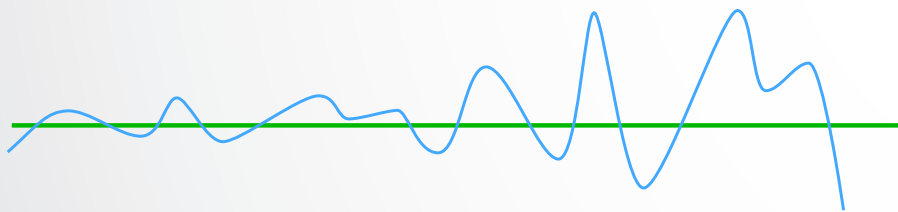

After aNorm Processing

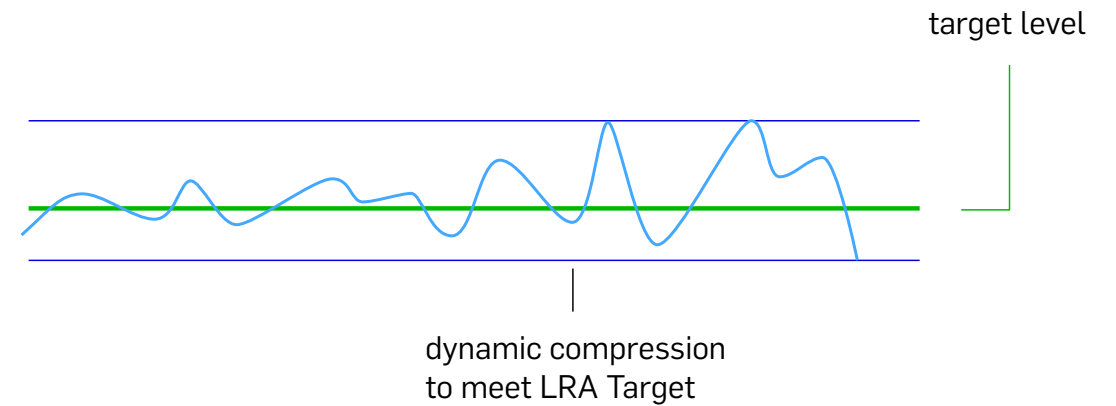


Normalized input w. transitions




Preset to Recall	"Norm w/Transition"
GPI Control	<input type="checkbox"/> Reset – <i>to mark program transitions</i>
Parameters to Tune	<input type="checkbox"/> Norm. level – <i>set to input normalization level</i> <input type="checkbox"/> LRA Target – <i>for more/less LRA restriction</i>

Before aNorm Processing

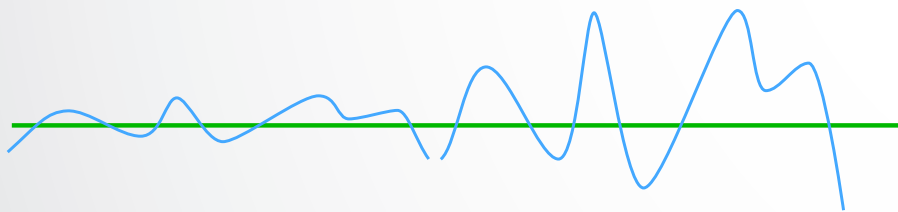

After aNorm Processing

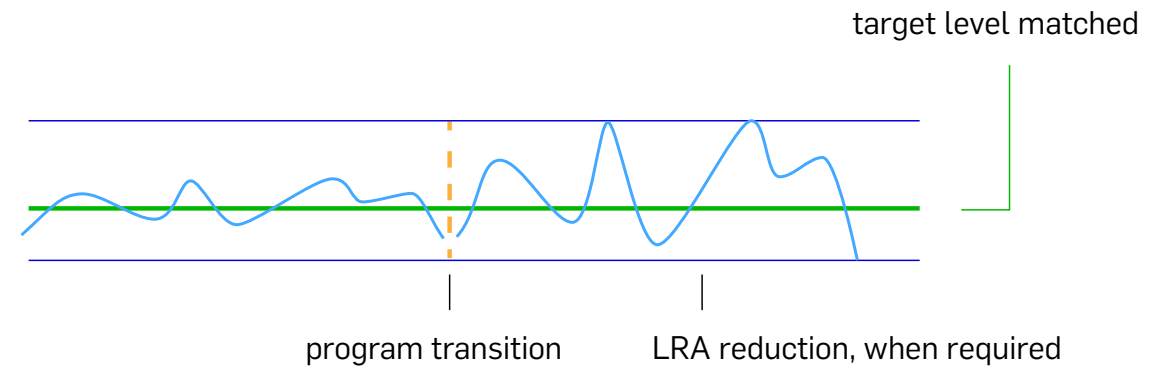

Movie / drama processing



Preset to Recall

"Norm w/Transition"

GPI Control


☐ Reset – *to mark program start*

Parameters to Tune


☐ History Length – *set to 15-60 min*

☐ LRA Target – *for more/less LRA restriction*

Before aNorm Processing

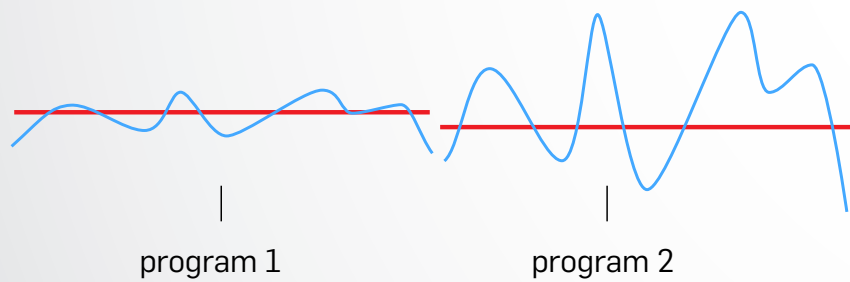

After aNorm Processing

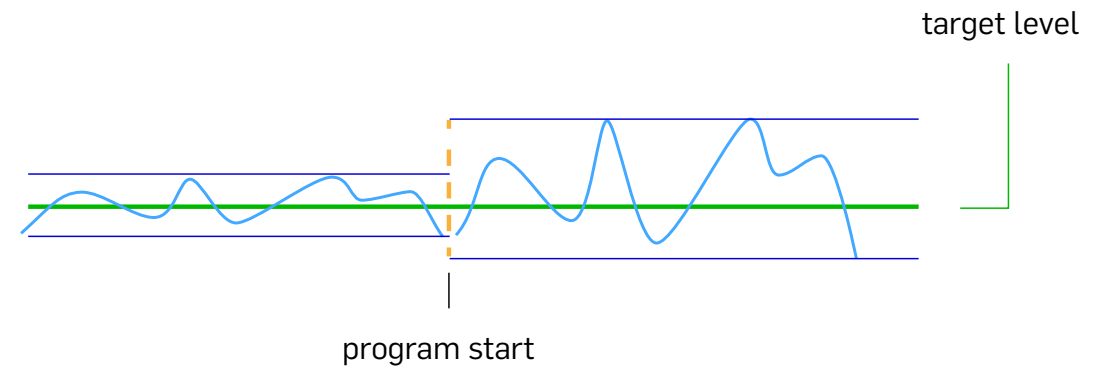


Programs w. normalized commercials




Preset to Recall	"Norm w/Transition"
GPI Control	<ul style="list-style-type: none">○ A/B Profile - to mark program transition (A=regular program, B = e.g. commercials)
Parameters to Tune	<ul style="list-style-type: none">○ LRA Target – for more/less LRA restriction○ Look-ahead – 300 ms for improved transition handling

Before aNorm Processing

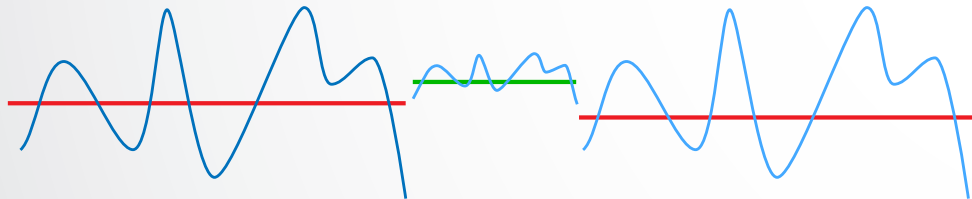

After aNorm Processing


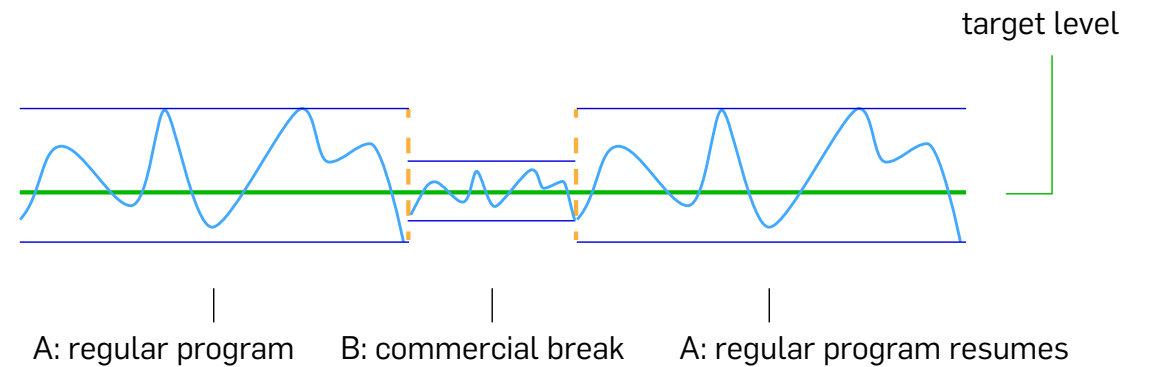


Ingest processing



Preset to Recall	"Not Norm Basic"
GPI Control	(none)
Parameters to Tune	<ul style="list-style-type: none">Reset – <i>clear aNorm before each new program</i>LRA Target – <i>for more/less LRA restriction</i>

Before aNorm Processing

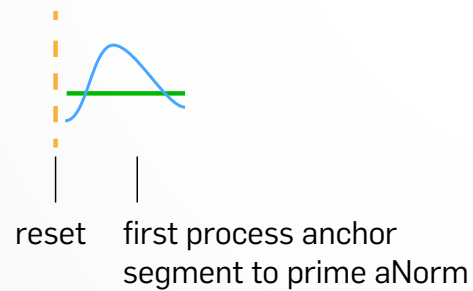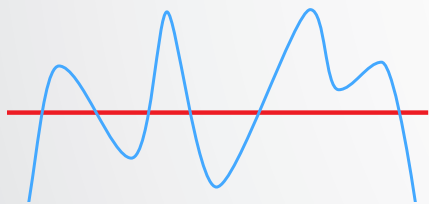

After aNorm Processing

